

## 1. Introduction

Congratulations on purchasing your new Swissphone analog pager. This instruction manual will guide you through the features and operations of your new paging unit. While there is a wide range of configuration options possible using the Swissphone programming software, this manual will describe the standard features and programming of your pager.

For the latest version of this manual, please visit our website at [www.swissphone.com](http://www.swissphone.com).

- Do not use this product in explosive areas!
- The warranty expires if you try to open the device or remove any label.

## 2. Turning the pager on/off

Turn the pager on by pressing and holding both the SELECT (1) and the OK (2) button simultaneously until you hear a loud beep. Once you hear a loud beep, your pager is turned on.

Turn the pager off by pressing and holding both the SELECT (1) and the OK (2) buttons for approximately four seconds. After a four second countdown with audible clicks the pager will power down.

 
 
## 3. Controls and Display

### Corner Buttons

The analog receiver is operated by two buttons. The left button is called SELECT (1) and allows the user to cycle through the various icons on the display. The right button is called OK (2) and allows the user to confirm the selection made with the SELECT (1) button along with acknowledge and replay messages.

### Display

When idle, the display shows the current operation mode, battery level, volume level and active profile or time of the day if no profiles are in use.

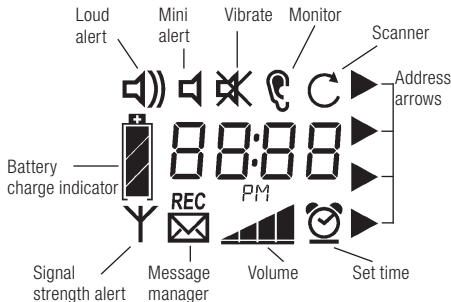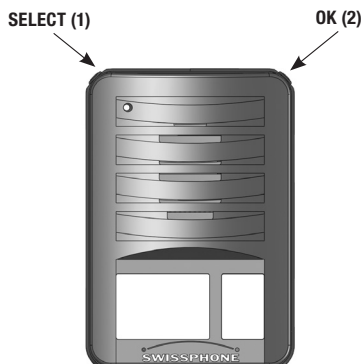

## 4. Operation of the Pager

The Swissphone programming software allows users to divide icons between two menus: the primary menu and the secondary menu. To access the secondary menu press and hold the left SELECT (1) button for approximately two seconds. Previously hidden icons appear.

Press the SELECT (1) button to navigate through the icons and press the right OK (2) button to confirm the selection.

### 4.1 Loud alert

Pager vibrates, beeps, and plays incoming messages.

### 4.2 Mini alert

Pager vibrates and plays incoming messages. For some configurations the pager will also beep in addition to vibrating and playing the incoming message.

### 4.3 Vibrate

Pager only vibrates.

### 4.4 Monitor

Pager will monitor the frequency specified in the active profile.

### 4.5 Scanning on/off

Pager will scan all channels that have been programmed on the scan list.

To turn scanning ON/OFF press the SELECT (1) button until the scan icon begins to flash, then press the OK (2) button to switch scanning on/off. Confirm your selection by pressing SELECT (1). Please note that there is an increased risk of missing calls during activated scanning mode. Single channel pagers are not available with scanning.

### 4.6 Volume

To change the volume press the SELECT (1) button until the volume icon begins to blink, then press the OK (2) button several times to change the volume level. When the desired volume level is reached, confirm the selection with SELECT (1).

All of the Icons above can be placed in the order of your choice through programming by your dealer. You may prefer i. e. the volume icon to be the first selection in the menu.

### Additional functions

Usually these functions are in the secondary menu, which may be accessed by holding the SELECT (1) button for approximately two seconds.

### Profiles/Channels

Press SELECT (1) and cycle through the icons until the active profile is blinking. Press OK (2) until the desired profile is flashing and confirm the selection by pressing SELECT (1).

The profiles/channels are usually located in the first position of the secondary menu to access them easily. To change the profile/channel in that instance, access the secondary menu by holding the SELECT (1) button for approximately two seconds. Next, press the OK (2) button to switch to the desired profile and confirm the selection by pressing SELECT (1).

### 4.7 Clock-Cycle

Clock-Cycle through the menu using the SELECT (1) button until the clock icon begins to blink. Next, confirm the selection by pressing OK (2). Press SELECT (1) until the correct hour is reached, then press OK (2) to adjust the minutes. Press SELECT (1) until the correct minute value is selected and then press OK (2) to save the time.

### 4.8 Envelope

The envelope icon allows users to replay previously deleted messages.

## 5. Receiving an alert

A red LED «REC» on the display indicates that a message is being recorded. Messages are recorded for 30 seconds unless an alternate configuration has been chosen.\* To interrupt the recording press and hold OK (2). After receiving an alert/call press the right OK (2) button once to acknowledge the call. Once the call is acknowledged the pager is in idle again.

\*Alternate configurations include 15 seconds, 30 seconds, 60 seconds, two minutes or four minute recording increments. Maximum recording capacity is 4 minutes.

## 6. Muting an alert quickly

Muting an alert quickly for quiet environments is easy. Simply press the SELECT (1) button twice to mute the incoming message. The message will be recorded and may be replayed at a later more convenient time.

To quickly stop the tone alert and still listen to the incoming message, press the SELECT (1) button once. The tone alert will stop; however, the incoming message will still be audible.

## 7. Replaying messages (only for units with stored voice)

To replay messages press the OK (2) button once and the most recent message will be played. To skip to the next message press the OK (2) button again or cancel the playback by pressing the SELECT (1) button. To delete a message press the OK (2) button twice. It is possible to delete all messages with the exception of the most recent message recorded to the pager.

Deleted messages may be played by activating the envelope and pressing OK (2).

## 8. Replacing the battery

 
Two types of batteries are compatible with the Swissphone analog pager:

- AA nickel-metal hydride (NiMH) a.k.a. rechargeable battery
- AA alkaline dry cell a.k.a. non-rechargeable battery

To open the battery compartment, use a coin to press down on the indented space between the belt clip and the pager housing at the back of the unit. Once the clip is loose remove the battery compartment cover from the right side.

Please note: If a non-rechargeable battery is inserted in the pager, the unit will charge for no more than ten minutes once placed in the charging cradle preventing any permanent battery acid-related damage to the pager. Non-rechargeable batteries should not be left in the pager when charging although this protective feature is enabled on the charger.

After inserting any battery, the battery type must be chosen by the user. To make the user aware that an action is needed, the following symbols will be shown alternating in the display:



Pressing the right hand button will (pre)select the active battery type. for dry cell and for rechargeable batteries. If needed you can now toggle between the selections with the left hand button. To apply the current selection, please press the right hand button.

## 9. Customer service

Please contact us by phone: +41 44 786 77 70 or by e-mail at [info@swissphone.com](mailto:info@swissphone.com) for further assistance.

Swissphone Wireless AG  
Fälmisstrasse 21  
8833 Samstagern  
Switzerland

**This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.**

**This Swissphone pager meets the requirements of the European Guideline R&TTE 99/05/EG (Radio Equipment and Telecommunications Terminal Equipment). Please ask for a declaration of conformity at [info@swissphone.com](mailto:info@swissphone.com).**